

MONTERING - TEKSTILRAMME DUKER

Enkel og grei montering





TEXTILE GRAPHIC INSTALLATION INSTRUCTIONS

Handle graphics with care with clean hands in a clean environment. Clean cloth or latex gloves are recommended.


1

Installation:
Push the SEG bead into each corner of the frame (1-4) with your thumb.

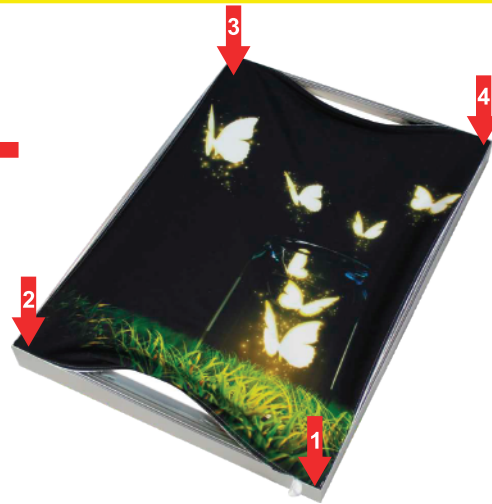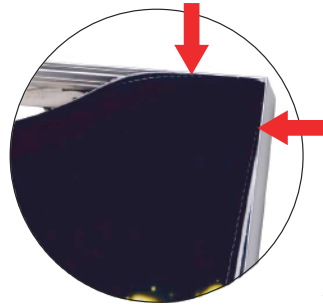




2

Push the SEG bead into the middle of the run (5-8) and work your way around the perimeter of the frame until all beading is pushed in properly.

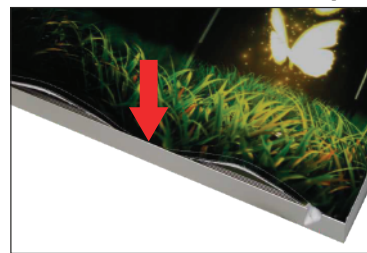

3

If necessary; Go around the perimeter again to ensure beading is secure in the extrusion profile.

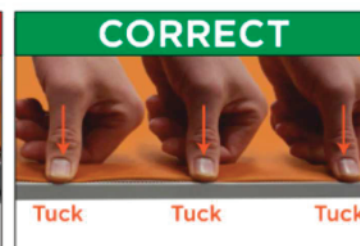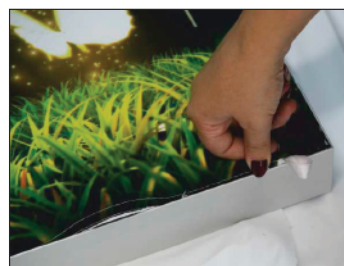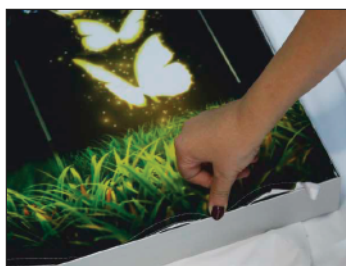

Pulling on the silicone welt during installation stretches the silicone and creates a bulge in the silicone welt that is difficult to correct smoothly.

A series of tucks reduces excess silicone.